

## Total load check with the BPW axle load pressure gauge!

BPW is offering an improved design of the tried-and-tested axle load pressure gauge for customers who want to have **total control** over their **vehicle's loading**.

The BPW axle load pressure gauge displays the axle load on a scale based on the pressure in the air bags. The pressure gauge is partially filled with silicone oil in order to damp the display needle. The vehicle load can be read off the appropriate scale. The scale used is dependent on the lengths of the springs in front of and behind the axle.

The BPW axle load pressure gauge gives the customer a clear and sufficiently accurate indication of the load condition. In addition, the straightforward display saves time during loading and unloading. There is no need for vehicles to be weighed separately.



BPW axle load pressure gauge 02.0130.31.00



BPW axle load pressure gauge 02.0130.24.00

The BPW axle load pressure gauge is available in the following versions:

Bag size	Axle load pressure gauge	Complete set
Ø 300 mm	02.0130.31.00	05.880.39.01.0
Ø 360 mm	02.0130.24.00	05.880.34.98.0

The complete sets contain the pressure gauge, screw connections, a stop cock and the installation diagram.