


My BPW – spare parts are just a click away.



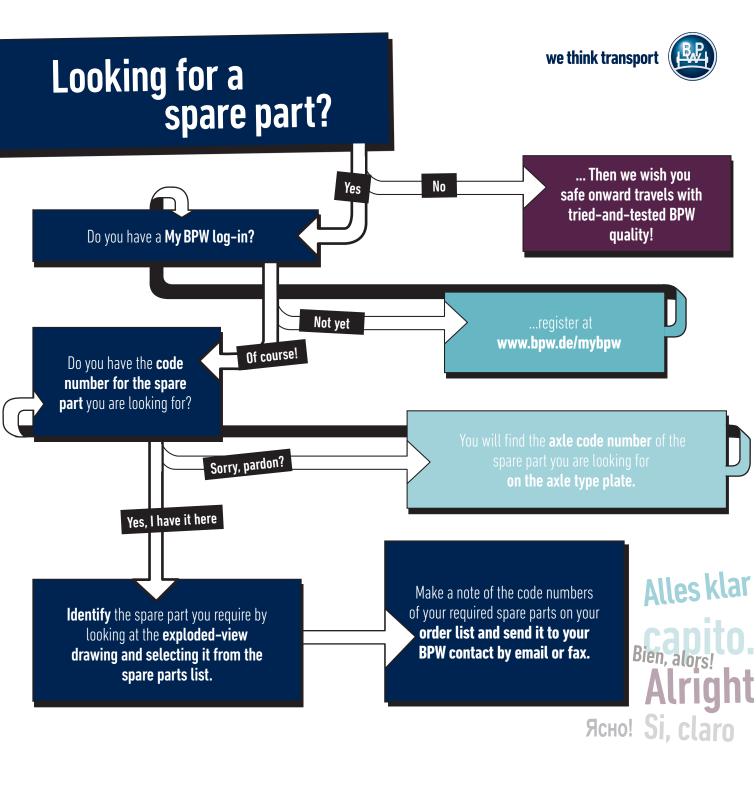

Target the right item from more than 10,000 BPW original spare parts.

Durable, maintenance-free products are a prerequisite for the efficient operation of your trailer and a central part of our commitment as a systems and international mobility partner. For us, however, there is more to it than that: within the framework of regular, pro-active maintenance, and of course in cases of emergency, you can rely on our supply of original quality spare parts – worldwide. To speed up the ordering process, My BPW helps you to quickly identify the parts you need. Over the next few pages, we want to show you how easy this is.

Welcome to My BPW

My BPW enables you to identify spare parts quickly thanks to its well-structured content, easy-to-understand navigation with intuitive operation, and logical layout of the product ranges. Thanks to constantly updated data, 24-hour availability and the option to download parts lists which currently detail 220,000 spare parts, My BPW also facilitates and optimises the flow of your spare parts ordering. Before you can start your search, you must register with My BPW. We will send you a link by email, which you click on to confirm receipt and receive your personal access details.



2. Navigation on My BPW

You will find the multilingual spare parts search function in the navigation column under the headings Commercial vehicles parts lists, Commercial vehicle spare parts search, and Agricultural vehicles parts lists. We will give you user-specific access to these areas, as well as to the technical data sheets.

In addition to the spare parts search function, My BPW also offers model test reports for download.

MY BPW - NAVIGATION

- → Home
- ▶ Wallpaper
- Newsletter
- ▶ Model test report
- Datasheets
- Spare parts commercial vehicles parts lists
- Commercial vehicle spare parts search
- Spare parts agricultural vehicles parts lists
- My settings
- ▶ Logout

3. Spare parts search function

Each BPW original spare part's 10-digit stock code serves as the basis for the search. This code number can be found on the axle type plate which should be entered into the appropriate search field. You can enter the number with punctuation (e.g. 27.58.617.001), without punctuation (e.g. 2758617001), or with placeholders (e.g. 275861* or 27.*61.0* to display multiple BPW spare parts in tabular form).

As well as allowing you to search for individual BPW parts, My BPW also enables the display of additional information and the printing of PDF documents. If you click on the "+" button in the search field, any auxiliary parts related to the listed BPW items will also be displayed. Click on "-" to close the display again.


Code number	27.58.617.001
Axle type	
Axie type	
Date of manuf. and no.	
Double contains and	
Butt welding no.	

If you have any problems with the search, you can follow the search process step-by-step by clicking on the "Help" icon in the top left-hand side of the page.

4. Search results


When the spare parts list is displayed in the form of search results, you can open each part's material master display by clicking on it. This includes dimensions, item number, and other information, such as the number of parts you will need to effect a repair. In addition, a movable window will also display an image of the item, as well as a table listing auxiliary parts.

If one or more groups are displayed, click on each group to open a list of all the parts contained and a corresponding exploded-view drawing (click to enlarge). Click again on any spare part on this list to open the material master display.

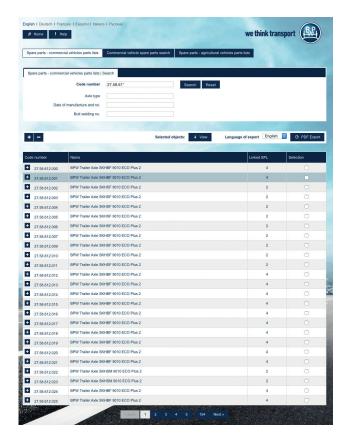

5. Identification

Through graphic illustrations of spare parts and exploded-view drawings of entire groups of parts, you can now identify the part you require. You can enlarge the images by clicking on them, thus enabling you to read code numbers or make exact comparisons.

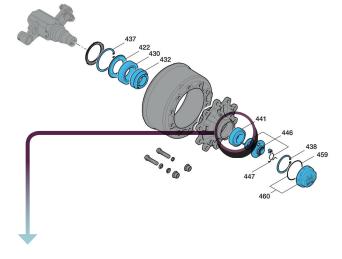



6. Ordering

Once you have identified the part you need, you can enter the corresponding code number in your order list and send it to your BPW contact by email or fax.









transport \cdot we think transport \cdot we think transport \cdot we think transport \cdot thin think transport - we think transport - we think transport - we think tr

think transport - we think transport - we think transport - we think transport - w

transport \cdot we think transport \cdot we think transport \cdot we think transport $\frac{1}{2}$ we thin think transport \cdot we think transport \cdot we think transport \cdot we think transport \cdot we port \cdot we think transport \cdot we think transport \cdot we think transport \cdot we t $ilde{\mathbb{B}}$ nk transport transport \cdot we think transport \cdot we think transport \cdot we think transport $ilde{ riangle}$ ve thin

port - we think transport - we think transport - we think transport - we tlink tran

transport - we think transport - we think transport - we think transport - ove thin think transport \cdot we think transport \cdot we think transport \cdot we think transport \cdot w port - we think transport - we think transport - we think transport - we t\{ \} nk transport transport - we think transport - we think transport - we think transport -

BPW Bergische Achsen Kommanditgesellschaft

Postbox 1280 · 51656 Wiehl, Germany Telephone +49 (0) 2262 78-0 · info@bpw.de www.bpw.de | www.wethinktransport.com

